

Table 6

2.06.00 Software – Cold Temperature Shutdown

002664	007999	015568	022597
002665	008021	017521	022631
003449	008074	017683	022641
003875	009474	018364	022654
003903	009501	018777	023419
004108	010193	018941	023420
004126	010194	019292	023421
005032	010196	019619	023423
005096	010197	020422	023697
005097	010387	020964	024000
005394	011026	020965	025546
005438	011470	021543	026137
006297	011834	021559	026878
006425	011936	021643	NA030786
006728	012287	022509	NA031363
006730	012659	022522	NA031533
007036	012859	022545	NA031857
007039	013520	022546	NA032151
007041	013928	022549	NA032179
007056	014655	022578	NA035807
007057	014733	022579	
007418	014927	022584	
007559	015154	022596	